

Fisher-Price®

M5606



- Age: Birth to 5 months.
- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required for battery replacement.
- Tool required for assembly: Phillips screwdriver (not included).

fisher-price.com



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Care

- To clean, wipe the surface of this toy with a damp cloth. Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

Consumer Information



WARNING

Possible Entanglement Injury


- Keep out of baby's reach.
- Remove mobile from crib or playpen when baby begins to push up on hands and knees.
- This product will not attach to all crib designs. Do not add additional strings or straps to attach to crib or playpen.




CAUTION

This package contains small parts. For adult assembly only. Take extra care during unpacking and assembly.


Parts

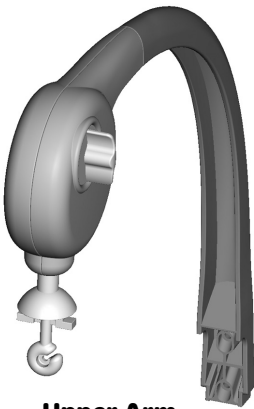


Upper Arm

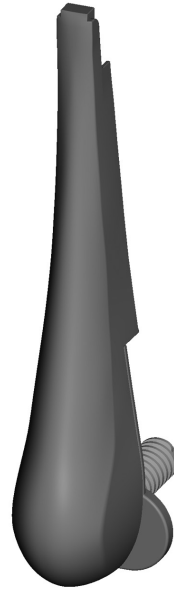

Lower Arm

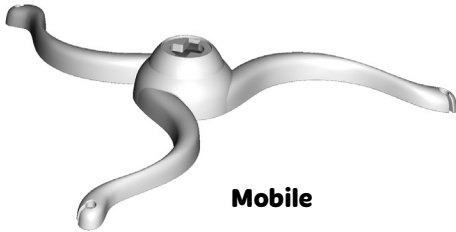

Mobile

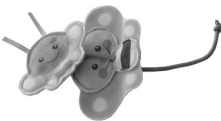


Small Soft Toy



3 Soft Toys




 
Knob



4 mm x 14 mm Screws - 2

Note: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten.

Assembly

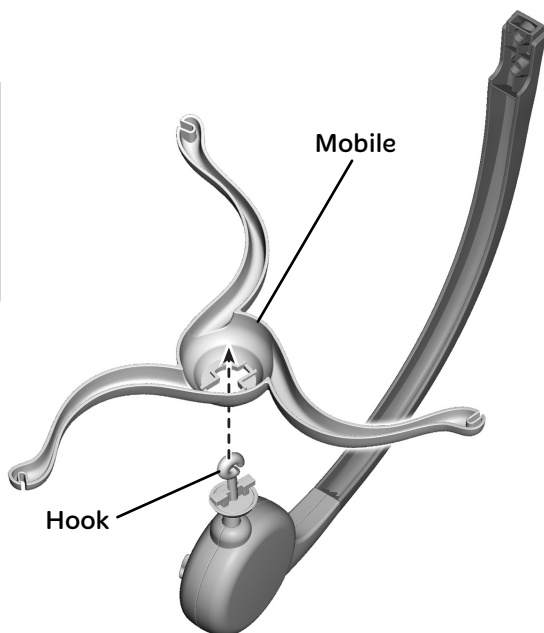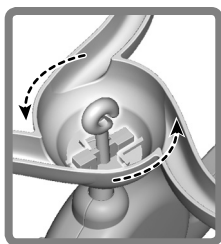


1

- Fit the mobile onto the hook on the upper arm.
- While holding the base of the hook, turn the mobile to lock it in place. Pull up on the mobile to be sure it is secure.

Small Soft Toy


Hook

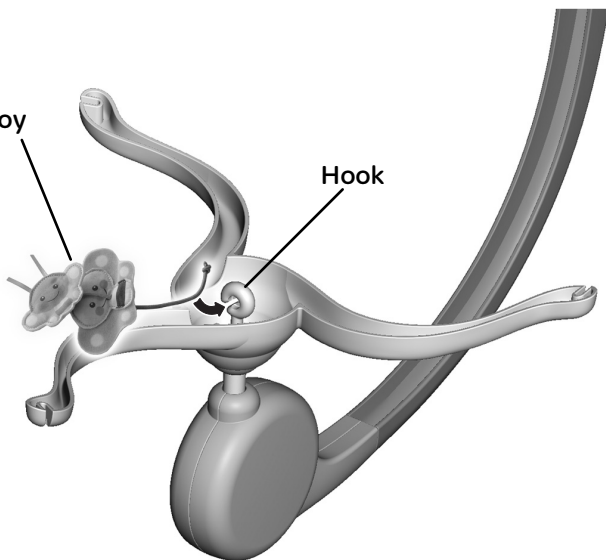


2

- Slide the string on the small soft toy into the slot on the hook in the center of the mobile.

Assembly

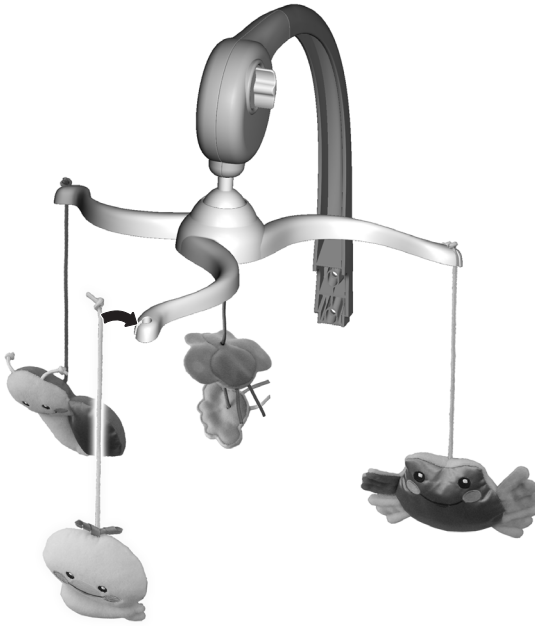


- Slide the string on each of the remaining soft toys into the slot in each arm on the mobile.
- Pull the strings down to secure in place.

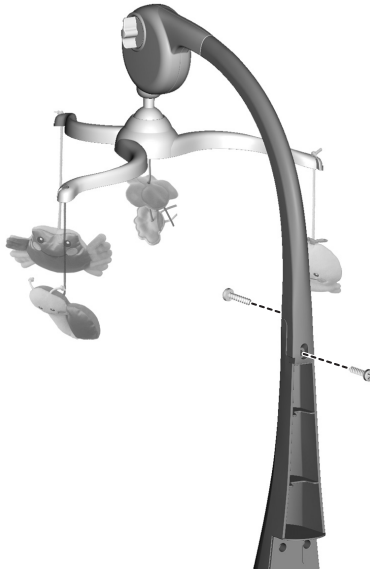


- Fit the upper and lower arms together. Insert two screws into the arms and tighten with a Phillips screwdriver. Do not over-tighten.

Crib Attachment

Always attach by all provided fasteners (knob) tightly to a crib or playpen according to the instructions. Check frequently.

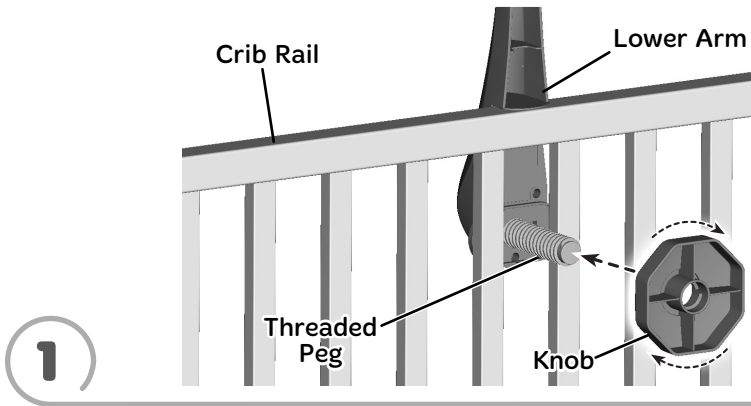

- Fit the end of the lower arm onto a crib rail so that the end of the threaded peg is on the outside of the crib rail.
- Attach the knob to the lower arm threaded peg.
- Turn the knob clockwise to secure the lower arm to the crib rail. Do not over-tighten.

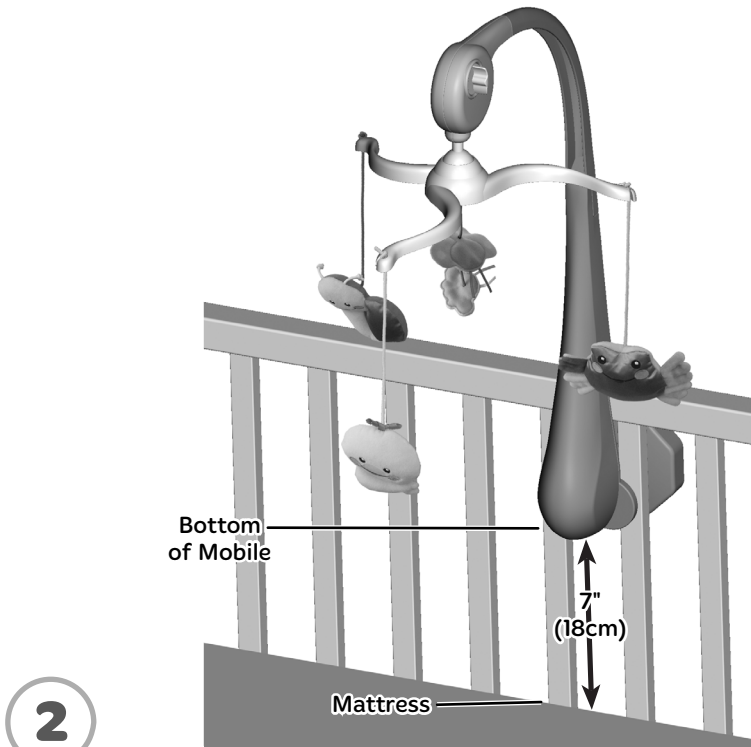

- If the distance between the mobile and the mattress is less than 7" (18 cm), lower the crib mattress.

Use



-
- A crib mobile is intended for visual stimulation and is not to be grasped by a child.
 - If attached to a crib or playpen, remove product when baby begins to push up on hands and knees.
 - Turn the dial to wind-up the music box. The mobile turns and music plays.